

Accessories


Teach Adapter

For LTX Linear Position Sensors

RP-Q21

**Kein Maßbild vorhanden/
No dimension drawing available**

- Teach adapter
- To program the measuring range of the analog LTX linear position sensors in rod design

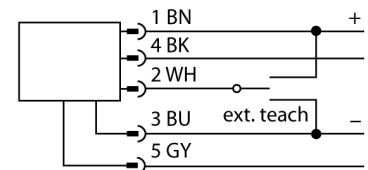

Functional principle

Connect the teach adapter between sensor and connection cable. Use the DIP switch to set the lower and upper limit of the measuring range. The sensor is thus easily adjusted to any application.

Type	RP-Q21
ID	6900005
Dimensions	82.6 x 34.8 x 20.8 mm